TRIPP TRAPP®

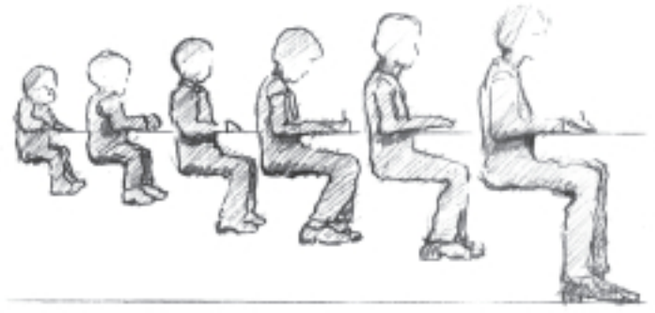

Design: Peter Opsvik

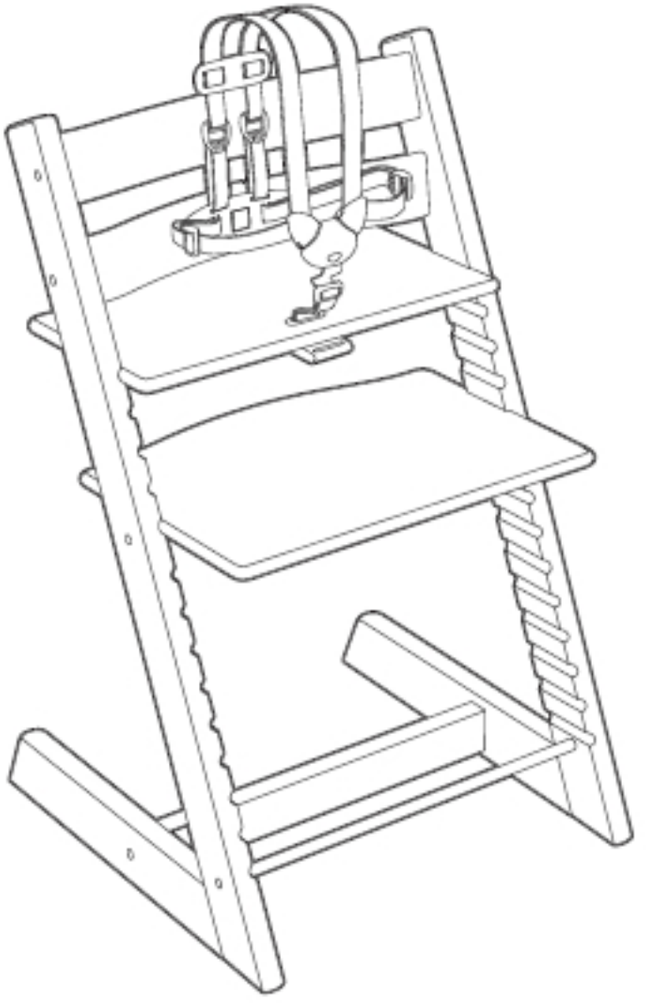

US

PLEASE GO TO **stokkeusa.com** TO REGISTER YOUR PURCHASE!

This allows us to notify you of any future safety related information

Thank you for purchasing our product!

ES

¡POR FAVOR, VAYA A **stokkeusa.com** PARA REGISTRAR SU COMPRA!

Esto nos permitirá notificarle sobre cualquier información en relación a la seguridad en el futuro.

¡Gracias por comprar nuestro producto!

FR

MERCI DE VOUS RENDRE SUR **stokkeusa.com** POUR ENREGISTRER VOTRE ACHAT!

Ceci nous permet de vous transmettre des informations sur la sécurité de nos produits

Merci d'avoir acheté notre produit!

ASTM F404 - 07

STOKKE™

www.stokkeusa.com

US 2 USER GUIDE

ES 8 INSTRUCCIONES DE USO

FR 14 NOTICE D'UTILISATION

STOKKE™

06-09-07 15:50:43

⚠ WARNING!

Prevent serious injury or death from falls or sliding out

- Never leave child unattended
- Always use the restraint system when the seat is in one of the top 3 grooves
- Always keep child in view
- Stay in reach of your child.
- Do not use the high chair unless all components are correctly fitted and adjusted. Pay special attention to the seat and foot plate – make sure these are properly fastened before you put your child into the high chair.
- Do not place the high chair near an open fire or other sources of strong heat, such as electric bar fires, gas fires etc due to the risk of fire.
- Do not use the high chair if any part is broken, torn or missing.
- Do not use the high chair before the child can sit up by itself.
- Always place the high chair on a level stable surface and make sure that the high chair has space to slide backwards.
- Be careful not to place small items, toxic substances, hot objects, and electrical flexes etc near the high chair where your child can reach them, as they may cause choking, poisoning or other injuries.
- Remember to retighten all screws 2-3 weeks after assembly of the high chair. After that you should check on and retighten the screws if necessary on a regular basis, e.g. every second month. Keep the Allen key for future use, but out of the childs reach.
- Do not use any accessories or replacement parts not manufac tured by STOKKE ™; this may affect your child's safety.
- Do not use the high chair as a step stool.
- Do not use with a booster seat
- The child should be secured in the high chair at all times by the restraining system
- TRIPP TRAPP® is intended for use when your child is capable of sitting upright unassisted (approximately 6 months)
- Front of footrest not to exceed front legs of chair at floor level

Table ▶
Be aware of the risk that a big frame under the table top makes it easier for children to push their legs against the table and tilt backwards. Also note that Tripp Trapp® is designed for dining tables 28-30" (72-76cm) high.

◀ Footrest
Make sure the forward edge of the footrest NEVER exceeds the front tip of the chair legs at floor level. This may cause the chair to be unstable when a child climbs in and out of the Tripp Trapp® high chair.

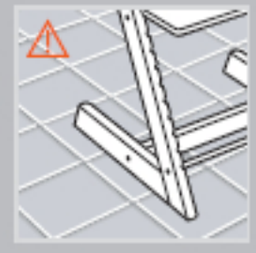

Rugs/Tiles ▲
To prevent the Tripp Trapp® high chair from tilting backwards, it has rounded plastic gliders that facilitates gliding underneath the legs. The function of the gliders is that when the high chair lifts from the floor in front, it slides backwards and returns to an upright position. To make sure that the gliders function as intended, the high chair should be placed on a surface that doesn't inhibit it from sliding backwards. That means that the surface should be level, stable and with a certain hardness. Carpets and rugs that are soft or with long loose ends that the high chair could sink into, is an unsuitable surface for your Tripp Trapp® high chair. Uneven floors, like some tiled floors could be are also an unsuitable surface for your Tripp Trapp® high chair. The gliders as well as the floor must be kept clean.

READ CAREFULLY BEFORE ASSEMBLING YOUR TRIPP TRAPP® HIGH CHAIR.

On the fold out page of this user guide you will find pictures that describe the assembly of your Tripp Trapp® high chair and Tripp Trapp® Baby Rail. The Baby rail should only be used with the seat plate in the first groove from top of high chair.

Parts

10 Metal screws • 6 Metal nuts • 1 Allen Key • 2 Curved backrests
2 Metal cross bars • 1 Wooden base cross bar • 1 Seat • 1 Footrest • 2 Legs

1. Attach the base cross bar to the legs (grooves face inside). Important to insert the shallow end of nut first!
2. Insert screws and tighten firmly.
3. Attach the two metal crossbars and tighten loosely
4. Attach the two curved back rests. Insert metal nut with shallow end first and tighten loosely. NOTE: Backrest with strap goes into bottom slots.
5. Slide seat and footrest into slots, with straight edge facing for ward. Make sure the height and depth of the seat and footrest suit the size of your child (see instructions for seat and footrest adjustments in this user guide).
6. Place the high chair on a level surface. Finally tighten all screws firmly in the order given.

SEAT AND FOOTREST ADJUSTMENT

It is important to adjust the depth and height of the seat and footrest to fit the size of your child. See illustrations on the fold out page, and description below. The settings of the seat and footrest should be checked as the child grows – at least once a year!
The seat plate and the footrest must be supported by the full length of the grooves on the sides (not half way supported).

Seat placement

Height - The seat is set at the correct height when your child's elbows are level with the table top.
Depth - For correct depth of the seat, position the child's back against the backrest with the seat supporting ¾ of the thighs. For the child's best comfort it is important that the seat depth is not too deep. Leave comfortable space between the front edge of the seat and back of the child's knee.
For a child 6-8 months it may amaze you how small seat they actually need! The seat plate should not protrude more than ¾-2" (2-5cm) in front of the chair side legs.

AGE	SEAT	FOOTREST
6 months	1	5
1 1/2 year	2	6
3 year	2	8
7 year	3	11
10 year	4	14
Teen/ Adult	n.a.	4-5*

**) Use footrest as seat. Therefore seat is not applicable.*

TABLE OF AGE AND APPROXIMATE ADJUSTMENT
This table is a rough guide for the height adjustment of seat and footrest according to the age of you child. Child differ in size according to age, so always make sure that your child is seated correctly according to the instructions given in this user guide.

Footrest placement

Height – The footrest is set at the correct height when the sole of the child's foot can rest flat on the footrest, while the thighs are touching the seat.
Depth – Make sure the forward edge of the footrest NEVER exceeds the front tip of the chair legs at floor level

RESTRAINT SYSTEM OPERATION

Always use the restraint system when the seat is in the 1st, 2nd or 3rd grooves from the top. Place child in seat. Pull each arm through the loop formed by the shoulder and waist strap, and place in child's lap. Crotch strap comes up between child's legs. Attach each shoulder strap to the crotch strap. Adjust length of shoulder, waist and crotch strap to restrain child in seat. Crotch strap length should be adjusted so that connector is at waist height.
The restraint system can be removed when your child has reached the age of 36 months AND is able to sit safely on TRIPP TRAPP®.
Use a tool to remove the spring under the seat plate to detach the crotch strap. Use a screwdriver to detach the rest of the harness from the backrest.

ACCESSORIES

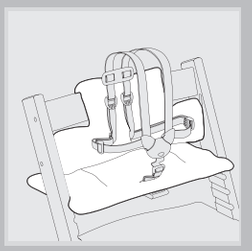

Tripp Trapp® Cushion
Comes in several colours and designs. It fits your Tripp Trapp® high chair both with and without Tripp Trapp® Baby Rail.

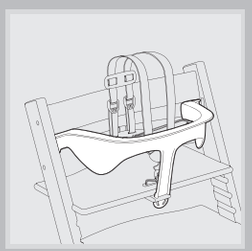

Tripp Trapp® Baby Rail
Baby rail intended for children from 6 months and up to 2 years.

WARRANTY

7 years warranty on all wooden and metal parts; 2 years warranty on textile parts. All related to material or workmanship defects.
This warranty does NOT apply to defects from normal wear and tear, product misuse, after market product alterations, used with non-STOKKE™ approved and marked accessories, or failure to follow assembly, use and care instructions supplied with the product.
If any defect is discovered, please return the product for inspection, with the receipt or other proof of purchase, to the retailer where it was purchased. Underneath one of the legs of your Tripp Trapp® high chair there is a barcode with a unique serial number. This number is ALWAYS required if you have a claim.

Product information: The chair is made of cultivated beech wood. The varnish contains no harmful substances, and the liberation of formaldehyde from the varnish complies with E1 requirements.
Safety approval: Tripp Trapp® high chair complies with ASTM F404-07. Tripp Trapp® high chair is JPMA certified.

JUVENILE PRODUCTS MANUFACTURERS ASSOCIATION
CERTIFIED
AN INDEPENDENT TESTING LABORATORY VALIDATES THE MANUFACTURER'S CERTIFICATION OF THIS HIGH CHAIR TO ASTM F404

ASTM F404 - 07

CLEANING AND MAINTENANCE

Wipe with a clean damp cloth, wipe off excess of water with a dry cloth. Moisture will crack stain. We do not recommend the use of any detergent or micro fibre cloth.
Colours may change if the high chair is exposed to the sun.

RIGHT OF COMPLAINT AND EXTENDED WARRANTY

Applicable worldwide in respect of the Tripp Trapp® chair, hereinafter referred to as the product

RIGHT OF COMPLAINT

The customer has a right of complaint pursuant to the consumer protection legislation applicable at any given time, which legislation may vary from country to country.

Generally speaking, STOKKE AS does not grant any additional rights over and above those laid down by the legislation applicable at any given time, although reference is made to the "Extended Warranty" described below. The rights of the customer under the consumer protection legislation applicable at any given time are additional to those under the "Extended Warranty", and are not affected thereby.

STOKKE "EXTENDED WARRANTY"

However, STOKKE AS, Håhjem, N-6260 Skodje, Norway, grants an "Extended Warranty" to customers who register their product in our Warranty Database. This may be done via our webpage www.stokke.com/guarantee. Alternatively, one may fill in and submit the warranty form, which is inserted into the instruction manual accompanying the product. Upon registration, a warranty certificate will be issued and sent to the customer electronically (e-mail) or by ordinary mail.

Registration in the Warranty Database entitles the owner to an "Extended Warranty" as follows:

- **7-YEAR** warranty against any manufacturing defect in the product.

The "Extended Warranty" also applies if the product has been received as a gift or purchased second-hand. Consequently, the "Extended Warranty" may be invoked by whoever is the owner of the product any given time, within the warranty period, and subject to the warranty certificate being presented by the owner.

THE STOKKE "EXTENDED WARRANTY" IS CONDITIONAL UPON THE FOLLOWING:

- Normal use.
- The product only having been used for the purpose for which the product is intended.
- The product having undergone ordinary maintenance, as described in the maintenance/instruction manual.
- Upon the "Extended Warranty" being invoked, the warranty certificate shall be presented, together with the original date-stamped purchase receipt. This also applies to any secondary or subsequent owner.
- The product appearing in its original state, hereunder that the only parts used have been supplied by STOKKE and are intended for use on, or together with, the product. Any deviations herefrom require the prior written consent of STOKKE.
- The serial number of the product not having been destroyed or removed.

THE STOKKE "EXTENDED WARRANTY" DOES NOT COVER:

- Issues caused by normal developments in the parts making up the product (e.g. colouration changes, as well as wear and tear).
- Issues caused by minor variations in materials (e.g. colour differences between parts).

- Issues caused by extreme influence from external factors like sun/light, temperature, humidity, environmental pollution, etc.
- Damage caused by accidents/mishaps – for example any other objects having bumped into the product or any person having overturned the product by colliding with it. The same applies if the product has been overloaded, for example in terms of the weight placed on it.
- Damage inflicted on the product by external influence, for example when the product is being shipped as luggage.
- Consequential damage, for example damage inflicted on any persons and/or any other objects.
- If the product has been fitted with any accessories that have not been supplied by Stokke, the "Extended Warranty" shall lapse.
- The "Extended Warranty" shall not apply to any accessories that have been purchased or supplied together with the product, or at a subsequent date – for example not to the "baby set" and/or pillow.

STOKKE WILL UNDER THE "EXTENDED WARRANTY":

- Replace or – if STOKKE thus prefers – repair the defective part, or the product in its entirety (if necessary), provided that the product is delivered to a reseller.
- Cover normal transport costs for any replacement part/product from STOKKE to the reseller from whom the product was purchased. – No travel costs on the part of the purchaser are covered under the terms of the warranty.
- Reserve the right to replace, at the time of the warranty being invoked, defect parts by parts that are of approximately the same design.
- Reserve the right to supply a replacement product in cases where the relevant product is no longer being manufactured at the time of the warranty being invoked. Such product shall be of corresponding quality and value.

HOW TO INVOKE THE "EXTENDED WARRANTY":

Generally speaking, all requests relating to the "Extended Warranty" shall be made to the reseller from whom the product was purchased. Such request shall be made as soon as possible after any defect has been discovered, and shall be accompanied by the warranty certificate as well as the original purchase receipt.

Documentation/evidence confirming the manufacturing defect shall be presented, normally by way of the product being brought along to the reseller, or otherwise being presented to the reseller or a STOKKE sales representative for inspection.

The defect will be remedied in accordance with the above provisions if the reseller or a STOKKE sales representative determines that the damage is caused by a manufacturing defect.

ASSEMBLING YOUR TRIPP TRAPP® HIGH CHAIR.

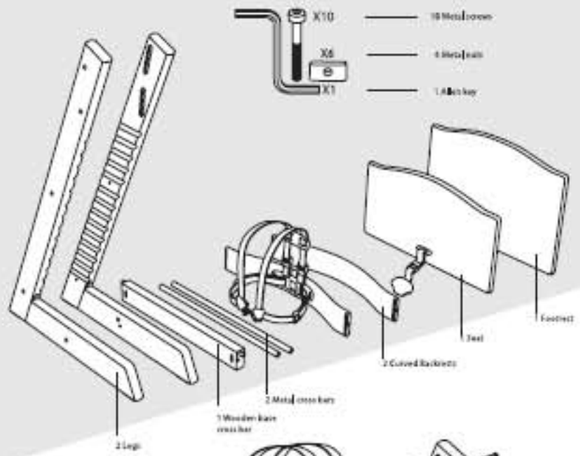

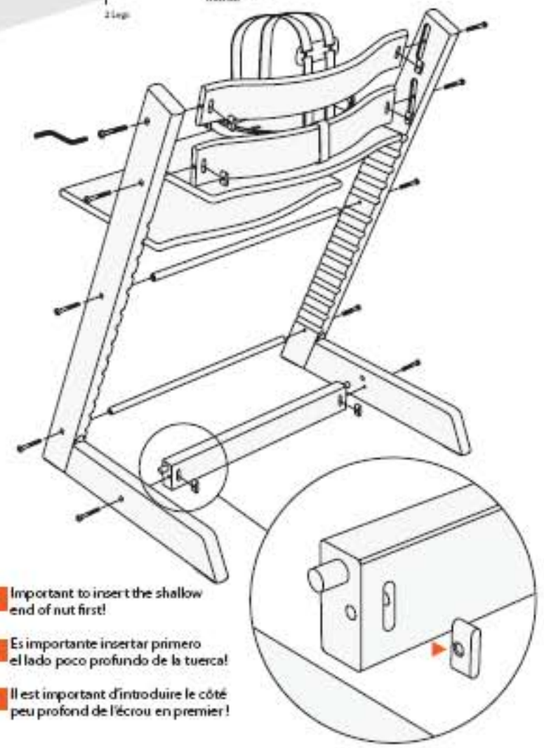

US Important to insert the shallow end of nut first!

ES Es importante insertar primero el lado poco profundo de la tuerca!

FR Il est important d'introduire le côté peu profond de l'écrou en premier !

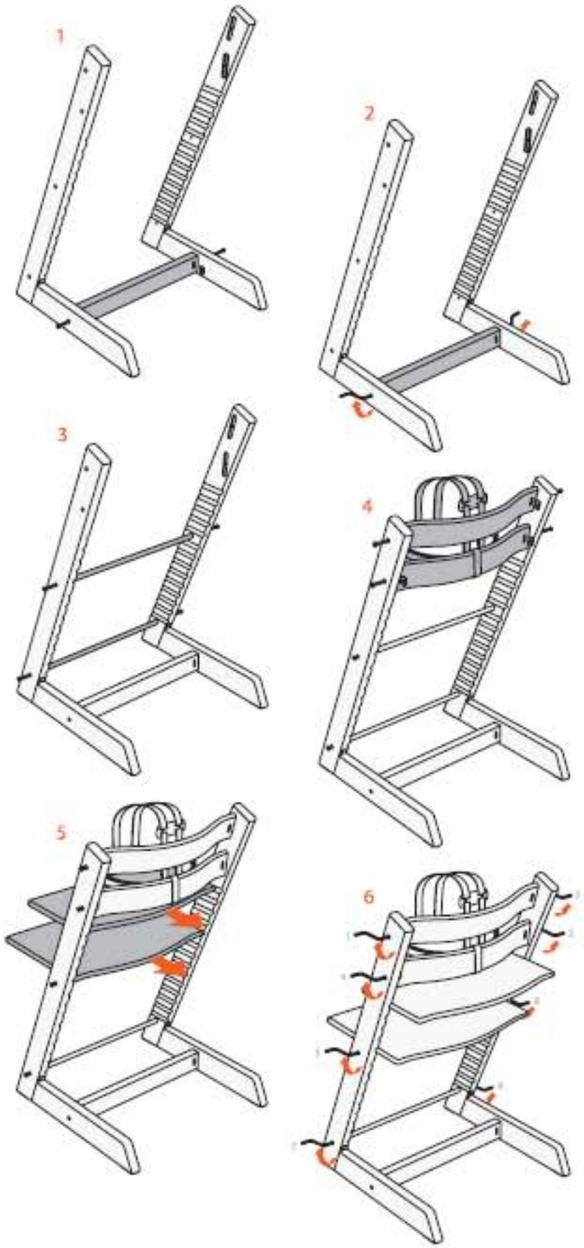

SEAT AND FOOTREST ADJUSTMENT